



Quick Reference Guide



Quick Reference Guide

P/N 82034907 Revision H (10/20/97)

MT2834ZDX, MT2834ZDXb, MT2834ZDX-Mac
MT2834ZDXI, MT2834DXK, MT2834ZDXK-Mac

This publication may not be reproduced, in whole or in part, without prior expressed written permission from Multi-Tech Systems, Inc. All rights reserved.

Copyright ©1997, by Multi-Tech Systems, Inc.

Multi-Tech Systems, Inc. makes no representations or warranties with respect to the contents hereof and specifically disclaims any implied warranties of merchantability or fitness for any particular purpose. Furthermore, Multi-Tech Systems, Inc. reserves the right to revise this publication and to make changes from time to time in the content hereof without obligation of Multi-Tech Systems, Inc. to notify any person or organization of such revisions or changes.

Record of Revisions

Revision	Description
H (10/20/97)	Manual revised to reflect editorial changes. All pages at Revision H.

Trademarks

Trademarks of Multi-Tech Systems, Inc. are as follows:

MultiModem, MultiModem II, MultiModemZDX, MultiModemp, MultiExpress, MultiExpressFax, Multi-Tech, and the Multi-Tech logo.

IBM is a trademark of International Business Machines Corporation.

Macintosh is a registered trademark of Apple Computer, Inc.

MNP, Microcom Network Protocol, is a trademark of Microcom, Inc.

ProComm Plus is a registered trademark of Datastorm Technologies, Inc.

Windows is a registered trademark of Microsoft in the U.S. and other countries.

Multi-Tech Systems, Inc.

2205 Woodale Drive
Mounds View, MN 55112 U.S.A
(612) 785-3500 or (800) 328-9717
Fax (612) 785-9874
Fax-Back (612) 717-5888
Technical Support (800) 972-2439
BBS (612) 785-3702 or (800) 392-2432
Internet <http://www.multitech.com>

Contents

Chapter 1 - Introduction

Congratulations	6
What Is in My Modem Package?	7

Chapter 2 - Quick Start

Introduction	8
Safety Warnings	8
What You'll Need	9
Step 1: Assemble the Modem	10
Step 2: Connect the Modem to Your System	11
RS232 Connection	12
LINE Connection	12
PHONE Connection	12
POWER Connection	12
Power-On Test	13
Step 3: Install the Modem in Windows 95	14
Adding the MT2834ZDX to Windows 95	14
Removing Your Old Modem from Windows 95	15
Step 4: Install and Configure Your Software	16
Third Party Communications Software	16
Step 5: Call the Multi-Tech BBS	18
Windows 95 HyperTerminal	18
Windows Terminal	19
Running MultiModemZDX Help	20
What Can I Do with My MultiModemZDX?	21

Chapter 3 - Features

Features	23
Required Equipment	24
Computer	24
Serial Cable	24

Telephone Line	24
Communications Software	25
Connections	26
Connecting to the Computer ("RS232")	26
Connecting to the Telephone Line ("LINE")	26
Connecting a Telephone Set ("PHONE")	27
Connecting to Power ("POWER")	27
Surge Protectors and Lightning	28
Front Panel	29
Speed Indicator Blink Rates	31

Chapter 4 - AT Commands, S-Registers and Result Codes

AT Commands	32
S-Registers	53
Result Codes	56

Chapter 5 - Troubleshooting

Introduction	57
None of the LEDs Light When the Modem Is On	58
The Modem Does Not Respond to Commands	59
The Modem Dials But Cannot Make a Connection	62
The Modem Disconnects While Online	64
The Modem Cannot Connect When Answering	65
File Transfer Is Slower Than It Should Be	65
I Am Losing Data	66
I Am Getting Garbage Characters on the Monitor	66
My Fax and Communications Software Won't Run at the Same Time	67

Appendix A - Regulatory Information

Single-User Software License Agreement	68
FCC Regulations for Telephone Line Interconnection	71
Canadian Limitations Notice	74
Compliance with BABT Requirements	75

European Low Voltage Directive	75
Compliance with BS6305 Clause 6.2, BS6320 Clause 7.2, and BABT/SITS/82/005S/D	75
Compliance with BS6789: Section 3.1 and Part 2	76
Compliance with DTI 83/009	77
Modern CE Mark EMC and Safety Compliance	78

Appendix B - Technical Specifications

Technical Specifications	79
--------------------------------	----

Appendix C - Service, Warranty and Tech Support

Limited Warranty	83
On-line Warranty Registration	84
Service	84
Tech Support	85
The Multi-Tech BBS	85
Logging on to the Multi-Tech BBS	85
Downloading a File	86
Reading a Message	87
Leaving a Message	87
Bulletins	87
About CompuServe	88
About the Internet	88
About the Multi-Tech Fax-Back Service	89
Multi-Tech Systems, Inc. Reader Response Form	90

Appendix D - MT2834ZDXb Data Rates

Index

Chapter 1 - Introduction

Congratulations

Congratulations on your purchase of the MT2834ZDX fax modem, one of the finest fax modems available today from one of America's oldest and most respected modem manufacturers. The MT2834ZDX complies with the international V.34 standard for a top speed of 28,800 bits per second (bps). The MT2834ZDXb complies with the enhanced V.34 standard for a top speed of 33,600 bps. Both models are downward compatible with all previous standards, including V.32terbo (19,600 bps), V.32bis (14,400 bps), V.32 (9600 bps), V.22bis (2400 bps), and V.22 (1200 bps). Both are full-duplex intelligent modems with V.42 error correction, V.42bis data compression, and V.17 (14,400 bps), Class 2, Group 3 fax capabilities.

This reference guide is for the MT2834ZDX (standard), MT2834ZDXb (33,600 bps), MT2834ZDX-Mac (Macintosh), MT2834ZDXK (UK), MT2834ZDXK-Mac (UK Macintosh), and MT2834ZDXI (international) versions of the modem. Except where specifically noted, references to the MT2834ZDX should be understood to apply to all versions, whereas references to the ZDX, ZDXb, ZDX-Mac, ZDXK, ZDXK-Mac, and ZDXI refer to specific versions.

In addition to this *Quick Reference Guide*, which you received with your modem, a complete *Owner's Manual* is available for the MultiModemZDX series of modems. The *Owner's Manual* provides more detailed information on the operation of your modem, including full descriptions of all AT commands. It also provides a glossary of terms, and chapters on modem basics, configuring, and testing. To order it, please see the Reader Response Form at the end of this guide.

The complete *Owner's Manual* is also available as a free Windows Help file. You will find instructions for downloading it from the Multi-Tech BBS on pages 21–25 of this guide. With the Windows Help version on your computer, help is never more than a few clicks away.

What Is in My Modem Package?

Your MT2834ZDX package has several components. Make sure you have them all before trying to operate your modem. Your package should include:

- One MT2834ZDX data/fax modem
- One DC power supply
- One set of four plastic feet
- Two sets of Velcro fasteners
- One telephone cable
- This *Quick Reference Guide*
- Communications (datcomm) software
- A brochure with a warranty registration card

If any of these items are missing, please contact Multi-Tech Systems or your dealer/distributor (see Appendix C for information on contacting Multi-Tech via telephone, fax, bulletin board service, CompuServe, and the Internet).

Chapter 2 - Quick Start

Introduction

We know you're eager to get your Multi-Tech MultiModemZDX fax modem up and running, so we'll skip the features for now, and show you step-by-step how to set it up, check it out, and make your first calls.

Safety Warnings

- Never install telephone wiring during a lightning storm.
- Never install a telephone jack in a wet location unless the jack is specifically designed for wet locations.
- Never touch uninsulated telephone wires or terminals unless the telephone line has been disconnected at the network interface.
- Use caution when installing or modifying telephone lines.
- Avoid using a telephone (other than a cordless type) during an electrical storm; there may be a remote risk of electrical shock from lightning.
- Do not use a telephone in the vicinity of a gas leak.

What You'll Need

Before starting, please make sure you have everything you need:

We supply

- The MT2834ZDX data/fax modem
- A DC power supply module
- One set of four plastic feet
- Two sets of Velcro fasteners
- One 14-foot telephone cable
- Communications (datacomm) software
- This *Quick Reference Guide*
- A brochure with a warranty registration card

You supply

- A computer with an unused serial port
- A shielded RS-232 serial cable with a male DB-25 connector on one end and a connector to match your computer's serial port on the other end
- A nearby AC power outlet
- A nearby telephone line jack

If you are unfamiliar with computers, please see Chapter 3, "Features," for more information on the required equipment before you proceed.

Step 1: Assemble the Modem

The only assembly required is to mount the feet on the bottom of the modem. Simply peel the four self-adhesive plastic feet off the backing strip and press them into the recesses on the bottom of the modem. Alternately, or additionally, you can use the included self-adhesive Velcro patches to mount the modem to a vertical surface or to keep it from being dislodged on a horizontal surface. If you use the Velcro patches, we recommend that you mount them where they will not obscure the labels on the bottom of the modem.

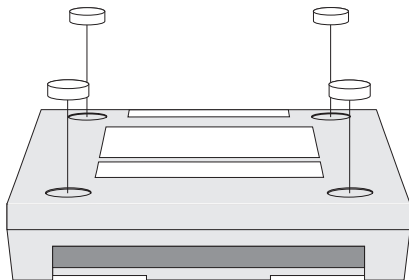


Figure 2-1. Mounting the feet.

Step 2: Connect the Modem to Your System

Placing the MT2834ZDX in a convenient location, connect it to your computer's serial port, to the telephone line, to AC power, and, optionally, to your telephone (the ZDXK and ZDXI models do not have a telephone jack).

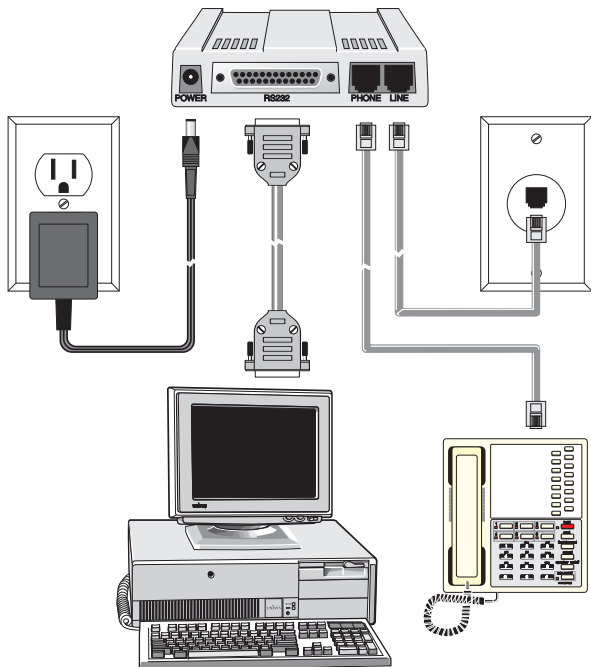


Figure 2-2. ZDX connections.

◆ RS232 Connection

Plug one end of the serial cable into the RS232 connector on the modem, and the other end into a serial port connector on your computer, such as COM1 or COM2.

◆ LINE Connection

Plug one end of the phone cable into the MT2834ZDX's LINE jack, and the other end into a phone line wall jack.

Note: The ZDX's LINE jack is not interchangeable with the PHONE jack. Do not plug the phone into the LINE jack or the line cable into the PHONE jack.

Note: The Federal Communications Commission (FCC), Industry Canada, and the British Approvals Board for Telecommunications (BABT) impose certain restrictions on equipment connected to public telephone systems. See Appendix A for more information.

◆ PHONE Connection

You may optionally plug a telephone into the ZDX's PHONE jack. This jack is provided as a convenience; you may also plug a telephone into a duplex jack inserted into your wall jack. The ZDXK and ZDXI models do not have a PHONE jack.

◆ POWER Connection

Plug the power supply module into an AC power outlet or power strip. Plug the power supply's cable into the POWER jack on the modem.

Note: Use only the power supply supplied with the MT2834ZDX. Use of any other power supply will void the warranty and could damage the modem.

◆ Power-On Test

Test the modem by turning it on (a power on/off switch is located on the right side). When you apply power, the modem performs a diagnostic self-test, indicated by the speed indicators flashing in sequence for a second or two, after which the 28 indicator should light. If this does not happen, check that the power switch is on, the power supply is solidly connected, and the AC outlet is live. If these measures do not work, see Chapter 6, "Troubleshooting Your Fax Modem."

Step 3: Install the Modem in Windows 95

If you are using Windows 95, you must install the modem in the operating system. (If you are using another operating system, you may skip this step.)

Adding the MT2834ZDX to Windows 95

1. Click the Start button, point to Settings, and click Control Panel.
2. Double-click the Modems icon. If no modem is currently installed, the Install New Modem wizard appears. If a modem is already installed, the Modems Properties sheet appears; click Add to go to the Install New Modem wizard.
3. Click Next in the Install New Modem wizard. Windows searches for your new modem and asks you to verify its selection.

Note: If Windows cannot find a modem, your modem may be turned off, it may be plugged into the wrong connector on your computer, or the serial cable may be faulty. See “None of the LEDs Light When the Modem Is Turned On” and “The Modem Does Not Respond to Commands” in Chapter 6, “Troubleshooting Your Fax Modem.”

4. If Windows identifies your modem correctly as a MultiTech MultiModem or a MultiModem MT2834ZDX, click Next to install the modem. After the modem is installed, click Finish to exit.
5. If Windows cannot identify your modem (for instance, if it identifies your modem as a “Standard Modem”), click Change. A dialog box with a list of manufacturers and a list of modems appears.
6. Select “MultiTech Systems” from the Manufacturers list box, then select “MultiModem MT2834ZDX” from the Models list box.
7. Click Next. Windows installs and configures the modem.
8. Click Finish to exit.

Removing Your Old Modem from Windows 95

When your MT2834ZDX replaces another modem, the old modem installation remains in Windows after you install the new modem, and the old modem is still selected in HyperTerminal and other Windows 95 applications. Although you can change the application connection descriptions one at a time, it is easier to force Windows 95 applications to use the MT2834ZDX by removing the old modem from Windows.

1. Click the Start button, point to Settings, and click Control Panel.
2. Double-click the Modems icon to open the Modems Properties sheet.
3. In the list box, select the old modem.
4. Click Remove, then click Close.
5. The next time you dial a HyperTerminal connection, it will select your new modem and ask you to confirm the selection.

Step 4: Install and Configure Your Software

You must have communications software installed in your computer to use the MT2834ZDX. If you wish to use communications software that is already installed, you should reconfigure it for the MT2834ZDX; otherwise, install the data and fax communications software provided with the MT2834ZDX (see software documentation for installation instructions).

Third Party Communications Software

1. Turn on your computer and run your communications software.
2. Find the dialog box or menu that lets you specify your modem. (In Windows Terminal, select Settings, Modem Commands; in HyperTerminal, select File, Properties, Phone Number; in ProComm Plus for Windows, select Window, Setup, Advanced; and in MultiExpress Terminal for Windows, select Setup, Terminal, Modem.)
3. Choose the Multi-Tech MultiModemZDX or MT2834ZDX from the software's modem list. If the MultiModemZDX isn't listed, choose another Multi-Tech modem, such as the MultiModemII.
4. Change the modem initialization string, if necessary. In most circumstances, **AT&FX4S0=0** works best for a PC, and **AT&FX4&E13&D0S0=0** works best for a Macintosh. For CompuServe, include **&E0&E14S7=60** in the string; if you use WinCIM, include **&E5** for WinCIM's software flow control. If you want the modem to always answer the phone, delete **S0=0** from the string. Depending on the software, you may have to end the string with a carriage return (**^M**).

Note: To change the modem's default initialization string, type the new commands in the software's terminal window, adding the command **&W** to store it in the modem's nonvolatile memory; e.g., **AT&FX4S0=0&W**.

5. Select the port the modem is connected to (normally COM1 or COM2).

6. Ideally, if you use data compression, you should set your serial port baud rate to four times the modem's maximum transmission speed or faster; however, not all serial ports can handle speeds that high. Set the serial port baud rate to 115,200 bps if your computer has a high speed serial port with a 16550AFN UART or equivalent and Windows 95; set it to 57,600 bps if it has Windows 3.1x. If you have an older computer with a 14550 UART, set it to 19,200 bps. Older Macintosh computers can use a serial port baud rate of 57,600 bps, and newer ones, 115,200 bps.

To see what UART is in your serial port if you have Windows 3.1x, select File, Run in Program Manager, type **MSD**, and press RETURN. Select COM Ports to see the UART type. If you have Windows 95, select Start, Settings, Control Panel, and double-click on the Modems icon. In the Modems Properties dialog box, click the Diagnostics tab, click the port the modem is connected to, and click More Info to see the UART type. Note: Both programs may identify a 14550 UART as an 8250A UART. If you have an 80386 or later computer, your UART is most likely a 14550 or 16550AFN. (For more information about serial port problems and UARTs, download ZDXHELP.HLP from the Multi-Tech BBS or CompuServe forum.)

7. If the software has an autobaud selection, make sure it is disabled. Autobaud applies only to older modems, and can cause problems if enabled.
8. If the software allows you to edit the no-connect messages (*NO CARRIER*, *BUSY*, *NO ANSWER*, *NO DIALTONE*), make sure there is no space between *DIAL* and *TONE* in *NO DIALTONE*.
9. Refer to the software manual or online Help for other configuration choices; in most cases you can accept the default values.

Step 5: Call the Multi-Tech BBS

Test the modem's data functions by calling the Multi-Tech Bulletin Board System (BBS) and downloading ZDXHELP.HLP, which contains the full *MultiModemZDX Owner's Manual* in convenient Windows Help format.

Windows 95 HyperTerminal

1. Click Start; then choose Programs, Accessories, and HyperTerminal.
2. Start HyperTerminal by double-clicking on the Hypertrm icon. HyperTerminal asks for the name of the connection.
3. Type **Multi-Tech BBS** in the Name text box and click OK.
4. In North America, type **800** in the Area Code box and **392-2432** in the Phone Number box. Local and international users, type **612** in the Area Code box and **785-3702** in the Phone Number box.
5. Verify that "Multitech MultiModem" or "MultiModem MT2834ZDX" is selected in the Connect Using drop-down list box, then click OK.
6. In the Connect dialog box, click Dialing Properties.
7. Make any necessary changes in the Where I Am and the How I Dial from This Location boxes. If you must dial 9 to access an outside line, you should type **9** in both the local and the long distance boxes unless your phone system has a special requirement.
8. Click OK, then click Dial. You will know you have reached a modem by the harsh sounds of the modem handshake.
9. When the BBS welcome screen appears in the HyperTerminal window, type your first name, last name, and password following the prompts. If you are a first-time caller, the BBS asks if your name is spelled correctly. If you answer **Y**, a questionnaire appears. You must complete the questionnaire to use the BBS on your first call.
10. Press RETURN until the Main Menu appears (answer **N** to any Newsletter or Bulletins questions for now). From the Main Menu you have access to three main areas: the Files Menu, the Message Menu, and Bulletins. For help with menu commands, type **?**.

11. In the Main Menu, type **F** and press RETURN to access the Files Menu, then type **D** and press RETURN to download.
12. At the prompt, type **zdxhelp.hlp**, then press RETURN twice.
13. Answer **Y** or **N** to the automatic logoff question.
14. Type **Z** and press RETURN to select the Zmodem transfer protocol.
15. The download begins automatically. As the file is copied to the HyperTerminal folder, a dialog box reports on the progress of the download. If the download fails, your baud rate may be set too high. Log off, set the COM port baud rate lower, and call again.
16. To log off the BBS if you answered **N** in step 13, press RETURN, type **G** for “good-bye,” and press RETURN twice more.
17. In the HyperTerminal window, click File, Save to save the HyperTerminal Connection description.

Windows Terminal

1. Open the Accessories program group and double-click on the Terminal icon.
2. Select the Settings menu and make the following changes:
Phone Number: Type **1-800-392-2432** if you are in North America, or an overseas access code and **612-785-3702** if you are outside North America.
Communications: Select the COM port the modem is connected to and change the following: Baud Rate to **19200**; Flow Control to **Hardware**; and Carrier Detect to **checked**.
Modem Commands: Select **MultiTech**. If you must dial 9 to get an outside line, type **ATDT9**, in the Dial Prefix text box (include the comma).
3. Click File, Save and save as **multibbs.trm**.
4. Click Phone, Dial to dial the BBS. You will know you have reached a modem by the harsh sounds of the modem handshake.

5. When the BBS welcome screen appears, type your first name, last name, and password following the prompts. If you are a first-time caller, the BBS asks if your name is spelled correctly. If you answer **Y**, a questionnaire appears. You must complete the questionnaire to use the BBS on your first call.
6. Press RETURN until the Main Menu appears (answer **N** to any Newsletter or Bulletins questions for now). From the Main Menu you have access to three main areas: the Files Menu, the Message Menu, and Bulletins. For help with menu commands, type **?**.
7. From the Main Menu, type **F** and press RETURN to access the Files Menu, then type **D** and press RETURN to download.
8. At the prompt, type **zdxhelp.hlp**, then press RETURN twice.
9. Answer **Y** or **N** to the automatic logoff question.
10. Type **X** and press RETURN to select the Xmodem transfer protocol.
11. To begin the download in Terminal, click Transfers, Receive Binary File; select the destination directory, type the file name (**zdxhelp.hlp**), and click OK to begin the transfer. If the download fails, your baud rate may be set too high. Log off, set the COM port baud rate lower, and call again.
12. To log off the BBS if you answered **N** in step 9, press RETURN, type **G** for "good-bye," then press RETURN twice again.

Running MultiModemZDX Help

Windows 95

1. Open the folder into which you downloaded the ZDXHELP.HLP file.
2. Move the file to a permanent location on your hard drive.
3. Double-click on the Zdxhelp icon to run MultiModemZDX Help.
4. Press F1 for help in using MultiModemZDX Help.

Windows 3.x

1. Open the directory into which you downloaded the ZDXHELP.HLP file.
2. Move the file to a permanent location on your hard drive.
3. In File Manager, select ZDXHELP.HLP, then click on File, Associate.
4. In the Associate With text box, type **WINHELP.EXE**, then click OK.
5. Double-click on the ZDXHELP.HLP file name to run it.
6. To create an icon for easier access to MultiModemZDX Help, drag the ZDXHELP.HLP file name from File Manager into any Windows program group, such as Main.

What Can I Do with My MultiModemZDX?

Your MT2834ZDX is the gateway to the exciting world of telecommunications.

You can use it to access commercial online information services such as CompuServe, America Online, Genie, and Prodigy. These services provide access to databases, encyclopedias, stock reports, news, weather, and shopping. They provide electronic mail (e-mail) links to subscribers of the same and other services. Public message areas called forums allow subscribers to trade information and opinions on a vast array of topics from A to Z, while vendor forums provide hardware and software support from Multi-Tech and other manufacturers. Online services also allow you to upload and download computer programs, data files, and updated software such as video and printer drivers.

The MT2834ZDX can also connect you to the Internet, an international computer network of universities, libraries, businesses, and government agencies. Like the commercial online services, the Internet provides e-mail services, public message areas, and access to information and software, much of it easily accessed through the World Wide Web.

You can also use the MT2834ZDX to dial into bulletin board services (BBS's). BBS's offer some of the services provided by online information services—usually e-mail, public message areas, and file transfers. Most are run as hobbies by individuals, but some are services provided by companies like Multi-Tech. Though some charge an annual fee, many are free.

Other uses include direct links to friends with modems, to banks, and to service bureaus. You can also telecommute with your fax modem—work at home while communicating with the office by modem or fax.

And of course, you can use your MT2834ZDX to send and receive faxes anywhere in the world, enabling you to communicate quickly with businesses and other organizations that do not maintain BBS's.

Chapter 3 - Features

Features

The MT2834ZDX automatically adjusts to line conditions and to the capabilities of the modem it connects to, resulting in the highest transmission speed, the most accurate error correction, and the most efficient data compression possible for each connection. The MT2834ZDX follows the ITU-T V.34 specification for data rates as high as 28,800 bps over public telephone lines, while the MT2834ZDXb follows the most recent revision of the V.34 specification for data rates up to 33,600 bps.

The MT2834ZDX's features include:

- Support of data rates of 33,600 and 31,200 bps (ZDXb only), 28,800, 26,400, 24,000, 21,600, 19,200, 16,800, 14,400, 12,000, 9600, 7200, 4800, 2400, 1200, and 300 bps for communicating with older modems as well as with other V.34 modems.
- Automatic fallback to slower speeds in noisy line conditions, and fall-forward to faster speeds as conditions improve.
- ITU-T V.42 LAP-M and MNP Classes 2–4 error correction.
- Data transfer rates up to 115,200 bps with V.42bis data compression.
- Serial port data rates adjustable to 115,200 bps.
- Autodial, redial, pulse (rotary) and touch-tone dial.
- Dial tone and busy signal detection for reliable call progress reporting.
- Compatibility with the standard AT command set used by most communication programs.
- On-screen help menus.
- Nonvolatile memory for storage of custom settings and two telephone numbers.
- Sends and receives faxes from your computer at 14,400, 9600, 4800, and 2400 bps.
- Responds to EIA TR29.2 Class 2 fax commands.

Required Equipment

In addition to the contents of the MT2834ZDX package, you need the following equipment.

◆ Computer

The MT2834ZDX can be connected to any computer with an RS-232C/V.24 serial port, such as the IBM PC, XT, AT, and PS/2 computers, and most PC compatibles. It can also be connected to the RS-422 serial ports on Apple Macintosh computers. To use your MT2834ZDX at its highest speeds, a PC must have either a serial port with a 16550AFN UART or a Multi-Tech ISI (Intelligent Serial Interface) card, such as the ISI551 (single port), ISI552 (dual port), or the ISI608 (eight ports). A 16550AFN UART can safely handle data at rates up to 115,200 bps. Almost all Macintoshes can handle data rates up to 57,000 bps, while the newer ones can handle data rates up to 115,000 bps.

◆ Serial Cable

To connect the MT2834ZDX to your computer, you must provide a serial cable, obtainable at computer stores and many office supply stores. The cable should have a male DB-25 connector at the modem end. For IBM and compatible computers, the other end may have a female DB-25 connector or a female DB-9 connector, depending on your computer. Most Macintosh computers require a round, 8-pin, mini-DIN connector. The Macintosh serial cable should be wired for hardware flow control. To reduce electrical interference, the FCC requires that the cable be shielded.

◆ Telephone Line

You must have a telephone line with a jack (connector) that accepts the cable that comes with the MT2834ZDX. If you do not have a telephone jack near your computer, you should install one before proceeding.

In North America, do-it-yourself telephone extension kits and accessories are available wherever telephones are sold. You may also hire an independent contractor or your local telephone company to do the work. If you want a separate line for your fax modem, you must contact your telephone company.

◆ Communications Software

To operate the MT2834ZDX, you must have data communications (datacomm) and fax communications software. Except for the ZDX-Mac and ZDXK-Mac, all versions come with a data and fax communications package. You must have Microsoft Windows 3.1 or later to run this software. If you require software for DOS or for the Macintosh operating system, please contact Multi-Tech Sales at (612) 785-3500 or (612) 785-9874 (fax). The MT2834ZDX is also compatible with other datacomm and fax programs.

Connections

All models connect to your computer (“RS232”), to a telephone line (“LINE”), and to a power source (“POWER”). Only the ZDX model may be connected directly to a telephone set (“PHONE”).



Figure 3-1. ZDX connectors.

◆ Connecting to the Computer (“RS232”)

Using a matching serial cable, connect the RS232 connector on the modem to one of the serial port connectors on the back of your computer. On an IBM PC or compatible, there are usually two serial ports named “COM1” and “COM2.” COM1 typically uses a DB-9 connector, whereas COM2 may use a DB-25 connector. Most Apple Macintosh computers use round mini-DIN-8 connectors for the serial ports. Choose the one marked with the icon of a telephone; the Macintosh gives priority to that port and will not interrupt your communications link. Be sure to tighten the mounting screws on the DB connectors.

◆ Connecting to the Telephone Line (“LINE”)

Plug one end of the cable provided with the MT2834ZDX into the telephone jack in your home or office. Plug the other end into the LINE jack on the MT2834ZDX.

Note: The ZDX's LINE jack is not interchangeable with the PHONE jack. Do not plug the telephone into the LINE jack or the line cable into the PHONE jack.

Note: The Federal Communications Commission (FCC), Industry Canada, and the British Approvals Board for Telecommunications (BABT) impose certain restrictions on equipment connected to public telephone systems. See Appendix A for more information.

◆ Connecting a Telephone Set (“PHONE”)

If you wish to connect a telephone to the same line as the ZDX, you may plug it into the latter's PHONE jack. This connector is provided as a convenience; you may also connect your telephone to a duplex jack inserted into your wall jack. The ZDXK and ZDXI models do not have a PHONE jack.

Note: The PHONE jack is not interchangeable with the LINE jack; do not plug the telephone into the LINE jack or vice-versa

◆ Connecting to Power (“POWER”)

Low voltage DC power is supplied to the MT2834ZDX through a modular power supply included with the modem. Plug the power supply module into a convenient AC power outlet or surge protector. Plug the connector on the other end of the power cord into the POWER jack on the modem. A power on/off switch is located on the right side of the modem.

Note: Use only the power supply supplied with the MT2834ZDX. Use of any other power supply will void the warranty and could damage the modem.

As soon as you apply power to the modem, it will perform a diagnostic self-test, indicated by the speed LEDs flashing in sequence for approximately two seconds, after which the 28 indicator should light. If this does not happen, check that the power switch is on, the power supply is solidly connected, and the AC outlet is live.

◆ Surge Protectors and Lightning

Power surges and other transient voltages on power lines, such as those caused by lightning strikes, can damage or destroy your modem. Damaging voltages can also enter your modem through the telephone line, especially during an electrical storm. Therefore, we recommend that you plug the MT2834ZDX into a surge protector rather than directly into a wall outlet, preferably a surge protector that provides protection against electrical spikes on the telephone line as well as on the power line. Note that not even a surge protector can guard against damage from a nearby lightning strike. During an electrical storm, your safest course is to unplug your computer equipment from both the power outlet and the telephone line.

Front Panel

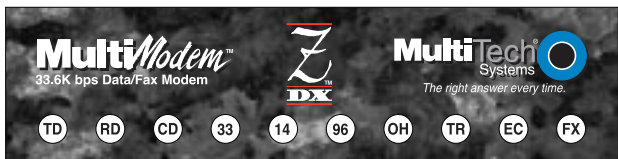


Figure 3-2. ZDXb front panel

The MT2834ZDX has ten LED indicators on the front panel that indicate status, configuration, and activity:

- TD Transmit Data.** The TD LED lights when the modem is transmitting data to another modem. The state of the LED matches the TD circuit on pin 2 of the RS-232C/V.24 interface.
- RD Receive Data.** The RD LED lights when the modem is receiving data from another modem. The state of the LED matches that of the RD circuit on pin 3 of the RS-232C/V.24 interface.
- CD Carrier Detect.** The CD LED lights when the modem detects a valid carrier signal from another modem. It is on when the modem is communicating with the other modem and off when the link is broken.
- 28 33 28,800–33,600 bps.** The 28 LED (33 LED on the ZDXb) lights by itself when the modem connects at 28,800 bps, blinks slowly to indicate 31,200 bps, and blinks fast to indicate 33,600 bps operation. This LED also lights or blinks in combination with the 14 LED to indicate speeds between 16,800 and 26,400 bps (see table).

- 14 14,400 bps.** The 14 LED lights by itself when the modem connects at 14,400 bps. The 14 LED lights or blinks in combination with the 28 LED to indicate speeds between 16,800 and 26,400 bps (see table). It lights together with the 96 LED to indicate a speed of 12,000 bps.
- 96 9600 bps.** The 96 LED lights when the modem connects at 9600 bps. If no speed LED lights, the modem is operating at less than 9600 bps.
- OH Off-Hook.** The OH LED lights when the modem is off-hook, which occurs when the modem is dialing, online, or answering a call. The LED flashes when the modem pulse-dials.
- TR Terminal Ready.** The TR LED lights when a datacomm program initializes the modem. It means the modem is ready for an outgoing or incoming call. It goes off when the datacomm program disconnects the COM port. When it goes off, a connected modem will disconnect. The state of the TR LED matches that of the DTR circuit on pin 20 of the RS-232C/V.24 interface.
- EC Error Correction (V.42).** The EC LED lights continuously when the modem is in error correction mode, and blinks when compression is activated.
- FX Fax.** The FX LED lights when the modem is in fax mode.

Note: When you turn on the MT2834ZDX, the speed lights flash briefly as the modem does a self-test, then the LED for the default modem baud rate lights. The default rate for the MT2834ZDX is 28,800 bps (33,600 bps for the ZDXb) unless you select and store another baud rate. After a call, the LEDs for the connection's baud rate remain lit until another call is made or the modem is reset. If you connect at a rate under 9600 bps, all speed LEDs remain off after the connection is broken, even though the modem is still turned on.

Speed Indicator Blink Rates

The 28 (33), 14, and 96 speed indicators light singly or in combination to indicate data rates. Data rates for the ZDX are shown in the following table. Data rates for the ZDXb are shown in Appendix D.

MT2834ZDX Data Rates

Data Rate (bps)	28 LED	14 LED	96 LED
< 9.6K	●	●	●
9.6K	●	●	○
12.0K	●	○	○
14.4K	●	○	●
16.8K (V.32terbo)	●	⊗	●
19.2K (V.32terbo)	●	☀	●
16.8K (V.34)	○	⊗	●
19.2K (V.34)	○	☀	●
21.6K	○	○	●
24.0K	⊗	○	●
26.4K	☀	○	●
28.8K	○	●	●
● Off	⊗ Slow blink (1/sec.)		
○ On	☀ Fast blink (5/sec.)		

Chapter 4 - AT Commands, S-Registers and Result Codes

AT Commands

This section summarizes your modem's AT commands. For detailed information on the commands, order the *MultiModemZDX Owner's Manual* or download the ASCII text or Windows Help versions from the Multi-Tech BBS (see "Step 5: Call the Multi-Tech BBS" in Chapter 2, or the reader response form at the end of this guide).

Command:	AT	Attention Code
Values:	n/a	
Description:		The attention code precedes all command lines except A/ , A: , and escape codes.
Command:	RETURN	Key
Values:	n/a	
Description:		Press the RETURN (ENTER) key to execute most commands.
Command:	A	Force Answer Mode
Values:	n/a	
Description:		Answer call before final ring.
Command:	A/	Repeat Last Command
Values:	n/a	
Description:		Do not precede this command with AT . Do not press RETURN to execute.

Command:	A:	Continuous Redial
Values:	n/a	
Description:		Redial last number until answered (10 redials in DOC modems). Do not precede this command with AT or press RETURN to execute. (Not available on ZDXK or ZDXI modems.)
Command:	&An	Answerback
Values:	n = 0 or 1	
Default:	0	
Description:	&A0	Disables answerback.
	&A1	Enables answerback reply to an ID request.
Command:	\$An	Auto-Reliable Buffering
Values:	n = 0 or 1	
Default:	0	
Description:	\$A0	Discard data received during establishment of a reliable connection.
	\$A1	Buffer data received during establishment of a reliable connection.
Command:	#An	Auto Speed Detection in Answer Mode
Values:	n = 0–3	
Default:	0	
Description:	#A0	Start at maximum speed and fall back to a lower speed (26400, 24000, 21600, 19200, 16800, 14400, 12000, 9600, 7200, 4800, 2400, 1200, or 300 bps) as line conditions warrant.
	#A1	Maximum speed only.
	#A2	Start at maximum speed and fall back decrementally to 4800 bps only.
	#A3	Start at 2400 bps and fall back to 1200 to 300 bps only.

Command:	Bn	Answer Tone (ZDXI modems only)
Values:	$n = 1$	
Default:	1	
Description:	B1	Select Bell answer tones, including Bell 103.
Command:	&BSn	Maximum Reliable Block Size
Values:	$n = 0$ or 1	
Default:	1	
Description:	&BS0	Maximum transmit block size of 64 characters.
	&BS1	Maximum transmit block size of 256 characters.
Command:	\BAn$	Baud Adjust
Values:	$n = 0$ or 1	
Default:	0	
Description:	\$BA0	Set baud adjust off, speed conversion on. (Serial port speed is independent of modem data rate.)
	\$BA1	Set baud adjust on, speed conversion off. (Serial port speed is same as modem data rate.)
Command:	&Cn	Carrier Detect Control
Values:	$n = 0, 1, 2,$ or 4	
Default:	1	
Description:	&C0	Force Carrier Detect high.
	&C1	Let Carrier Detect follow carrier signal.
	&C2	Let Carrier Detect drop on disconnect, then go high again (for some CBX phone systems).
	&C4	Reset modem when Carrier Detect drops.

Command:	&CDn	Cleardown at Disconnect
Values:	$n = 0, 1$	
Default:	0	
Description:	&CD0	Execute a cleardown at disconnect.
	&CD1	Do not execute a cleardown at disconnect.
Command:	Ds	Dial
Values:	$s = \text{dial string (phone number and dial modifiers)}$	
Default:	none	
Description:		Dial telephone number s , where s may include up to 60 digits and T , P , R , comma, colon, and semicolon characters.
Command:	DsNd	Store Telephone Number
Values:	$s = \text{dial string (phone number and dial modifiers)}$ $d = 0 \text{ or } 1$	
Default:	none	
Description:		To store, enter D followed by dial string s , then N followed by directory number d . Example: ATDT9,5551212N1 .
Command:	&Dn	Data Terminal Ready Control
Values:	$n = 0-3$	
Default:	2 (ZDX, ZDXI, ZDXK) 0 (ZDX-Mac, ZDXK-Mac)	
Description:	&D0	Modem ignores DTR signal.
	&D1	When DTR drops, the modem hangs up. While DTR is low, the modem accepts commands but will not dial or auto-answer until DTR goes high again.
	&D2	Same as &D1 .
	&D3	When DTR drops, the modem hangs up and resets as if an ATZ command were issued.

Command: **\$Dn DTR Dialing**
Values: *n* = 0 or 1
Default: 0
Description: \$D0 Do not dial when DTR goes high.
 \$D1 Dial stored number N0 when DTR goes high.

Command: **%DCn AT Command Control**
Values: *n* = 0 or 1
Default: 0
Description: %DC0 The modem responds to AT commands.
 %DC1 The modem ignores AT commands.

Note: The modem will respond to **AT%DC** for 10 seconds after power-up.

Command: **%DFn Format Line Probe Data**
Values: *n* = 0 or 1
Default: 0
Description: %DF0 Display data in graph format. Y axis is gain shown in dBm.
 %DF1 Display data in table format. Gain is shown numerically in dBm at 75Hz increments from 150Hz to 3750Hz.

Command: **%DPn Read Line Probe Data**
Values: *n* = 0 or 1
Default: 0
Description: %DP0 Do not read and store line probe information from DSP during handshake.
 %DP1 Read and store line probe information from DSP during handshake.

Command:	>DTn	DTMF Detection
Values:	<i>n</i> = 0 or 1	
Default:	0	
Description:	>DT0	The modem will not detect DTMF tones.
	>DT1	The modem will detect and report DTMF tones when it is off-hook.
Command:	En	Echo Command Mode Characters
Values:	<i>n</i> = 0 or 1	
Default:	1	
Description:	E0	Do not echo keyboard input to the terminal.
	E1	Do echo keyboard input to the terminal.
Command:	&En	V.42 Error Correction Modes
Values:	<i>n</i> = 0, 1, or 2	
Default:	1	
Description:	&E0	V.42 non-error correction mode (V.42 disabled).
	&E1	V.42 auto-reliable mode.
	&E2	V.42 reliable mode (V.42 enabled).
Command:	&En	Modem-Initiated Flow Control
Values:	<i>n</i> = 3, 4, or 5	
Defaults:	4	
Description:	&E3	Flow control disabled.
	&E4	CTS/RTS hardware flow control.
	&E5	XON/XOFF software flow control.
Command:	&En	XON/XOFF Pass-Through
Values:	<i>n</i> = 6 or 7	
Defaults:	6	
Description:	&E6	Respond to and discard XON/XOFF characters when &E5 is selected.
	&E7	Respond to and pass through XON/XOFF characters when &E5 is selected.

Command:	&En	Hewlett Packard ENQ/ACK Pacing
Values:	$n = 8$ or 9	
Default:	8	
Description:	&E8	Ignore ENQ/ACK pacing characters.
	&E9	Respond to ENQ/ACK pacing characters.
Command:	&En	Non-Error Correction Mode Flow Control
Values:	$n = 10$ or 11	
Default:	10	
Description:	&E10	Disable non-error correction mode flow control.
	&E11	Enable non-error correction mode flow control.
Command:	&En	Pacing (Computer-Initiated Flow Control)
Values:	$n = 12$ or 13	
Default:	13	
Description:	&E12	Pacing disabled.
	&E13	Pacing enabled.
Command:	&En	Data Compression
Values:	$n = 14$ or 15	
Default:	15	
Description:	&E14	Data compression disabled.
	&E15	Data compression enabled.
Command:	\$En	V.42 Error Correction at 300 bps
Values:	$n = 0$ or 1	
Default:	0	
Description:	\$E0	V.42 error correction at 300 bps disabled.
	\$E1	V.42 error correction at 300 bps enabled.

Command:	\$EBn	Asynchronous Word Length
Values:	$n = 0$ or 1	
Default:	0	
Description:	\$EB0	10-bit mode enabled.
	\$EB1	11-bit mode enabled.
Command:	%En	Escape Sequence Options
Values:	$n = 0-5$	
Defaults:	1 and 4	
Description:	%E0	Modem won't escape.
	%E1	+++AT<CR> method.
	%E2	<BREAK>AT<CR> method.
	%E3	Both +++AT<CR> and <BREAK>AT<CR> methods.
	%E4	No <i>OK</i> response to +++AT<CR> .
	%E5	<i>OK</i> response to +++AT<CR> .
Command:	&Fn	Load Default Configurations
Values:	$n = 0, 8, \text{ or } 9$	
Default:	8	
Description:	&F0	Load factory default values from ROM if &F8 was previously stored; load user default values from non-volatile memory if &F9 was previously stored.
	&F8	Read factory default values when &F is issued (effective only if you store &F8 using &W0).
	&F9	Read values stored in non-volatile memory when &F is issued (effective only if you store &F9 using &W0).

Command: **\$Fn Enable/Disable Auto-Reliable Fallback Character**

Values: $n = 0$ or 1

Default: 0

Description: **\$F0** Do not fall back to non-error correction mode connect if <CR> is received during handshake.

\$F1 Fall back to non-error correction mode connect if <CR> is received during handshake.

Command: **%Fn Echo Canceller Frequency Offset Compensation**

Values: $n = 0$ or 1

Default: 0

Description: **%F0** Disable echo canceller frequency offset compensation.

%F1 Enable echo canceller frequency offset compensation.

Command: **#Fn Fallback Modes When On Line**

Values: $n = 0, 1,$ or 2

Default: 2

Description: **#F0** No fallback when on line.

#F1 Fall back decrementally from maximum speed to 4800 bps as line conditions deteriorate.

#F2 Fall back decrementally to 4800 bps; fall forward when line conditions improve.

Command:	&Gn	Guard Tones
Values:	$n = 0, 1, \text{ or } 2$	
Default:	0	
Description:	&G0	Turn off ITU-T guard tones.
	&G1	Turn on ITU-T 550 Hz guard tone.
	&G2	Turn on ITU-T 1800 Hz guard tone.
	Note: The ZDXK is locked to the ITU-T 1800 Hz guard tone (&G2).	
Command:	Hn	On Hook/Off Hook
Values:	$n = 0 \text{ or } 1$	
Default:	None	
Description:	H0	Go on hook (hang up).
	H1	Go off hook.
Command:	\$Hn	Help Screens
Values:	$n = 1, 2, \text{ or } 3$	
Default:	None	
Description:	\$H1	Display Help Screen #1.
	\$H2	Display Help Screen #2.
	\$H3	Display Help Screen #3.
Command:	In	Inquire Product Codes
Values:	$n = 0, 1, \text{ or } 2$	
Default:	None	
Description:	I0	Display modem ID number.
	I1	Display firmware version number.
	I2	Display modem description.
Command:	#lx	Enter Login Password
Values:	$x = \text{password (6–10 characters)}$	
Default:	MULTI-TECH	
Description:	Enters the remote configuration login password.	

Command: **#l=x Store Login Password**
Values: **x = password (6–10 characters)**
Default: **MULTI-TECH**
Description: Stores a new remote configuration login password.

Command: **Ln List Commands**
Values: **n = 0, 5–8**
Default: **None**
Description: **L** List stored telephone numbers.
L5 List current operating parameters.
L6 List current S-register values.
L7 List additional current operating parameters.
L8 List DSP code version number, processor speed, and online diagnostic parameters.
L9 List signal strength information.
L10 List signal to noise ratio information (SNR).
L11 List noise information.

Note: For L9, L10, and L11, you must first type **+++AT<CR>** (on-line escape command while maintaining command mode), then type the command prefixed by an AT (e.g., **ATL10**).

Command: **#Ln V.42 Mode Selection in Originate Mode**
Values: **n = 0, 1, 2, or 3**
Default: **0**
Description: **#L0** Modems negotiate V.42 mode.
#L1 MNP on & LAP-M off.
#L2 LAP-M on & MNP off.
#L3 Disable detection phase and go directly to LAP-M.

Command: **M*n*** **Modem Speaker Control**
Values: *n* = 0, 1, 2, or 3
Default: 1
Description: M0 Speaker always off.
M1 Speaker on until carrier signal detected.
M2 Speaker always on.
M3 Speaker on during dialing, off during handshaking.

Command: **\$MB*n*** **Modem Baud Rate**
Values: *n* = speed
Default: 28800 (ZDX) or 33600 (ZDXb)
Description: \$MB75 Originate call in ITU-T V.23 mode (ZDXK, ZDXI)
\$MB300 Originate call at 300 bps.
\$MB1200 Originate call at 1200 bps.
\$MB2400 Originate call at 2400 bps.
\$MB4800 Originate call at 4800 bps.
\$MB7200 Originate call at 7200 bps.
\$MB9600 Originate call at 9600 bps.
\$MB14400 Originate call at 14,400 bps.
\$MB16800 Originate call at 16,800 bps.
\$MB19200 Originate call at 19,200 bps.
\$MB28800 Originate call at 28,800 bps.
\$MB33600 Originate call at 33,600 bps (ZDXb only).

Command: **N*d*** **Dial a Stored Number**
Values: *d* = 0 or 1
Default: None
Description: Dial stored telephone number *d*.

Command:	NdNe...	Number Linking
Values:	$d = 0$ or 1 ; $e = 1$ or 0	
Default:	None	
Description:	Dial stored number d ; if it is busy, dial stored number e .	
Command:	O	Go Back On Line
Values:	n/a	
Description:	Return to online mode after you have used an escape sequence to go from online mode to command mode.	
Command:	P	Pulse Dial
Values:	n/a	
Default:	Yes	
Description:	The modem pulse-dials numbers that follow P in the dialing command.	
Command:	&Pn	Set Pulse Dial Ratios
Values:	$n = 0$ or 1	
Default:	0	
Description:	&P0	60:40 break/make pulse ratio.
	&P1	67:33 break/make pulse ratio.
	Note: The ZDXK is locked to a 67:33 pulse ratio (&P1).	
Command:	Qn	Result Codes Enable/Disable
Values:	$n = 0, 1$, or 2	
Default:	0	
Description:	Q0	Enable result codes.
	Q1	Disable result codes (quiet).
	Q2	Enable no-response answer mode, which leaves originate mode intelligent while turning off answer mode responses and echo.

Command: **&Qn Multi-Tech or Standard Result Codes**
Values: $n = 0$ or 1
Default: 0
Description: &Q0 Multi-Tech responses with modifiers.
&Q1 Standard AT responses with no modifiers.

Command: **&Rn Reverse Originate/Answer Modes**
Values: $n = 0$ or 1
Default: 0
Description: R0 Modem will not reverse modes.
R1 Modem will reverse modes when **R** is added to the dial string.

Command: **&Rn Clear to Send Control**
Values: $n = 0, 1,$ or 2
Default: 1
Description: &R0 Let CTS state follow RTS state when on line.
&R1 Force CTS high (on).
&R2 Let CTS drop on disconnect for time set by S24, then go high again.

Command: **&RAn Asymmetrical Bit Rate**
Values: $n = 0$ or 1
Default: 0
Description: &RA0 Enable asymmetrical bit rate in V.34 mode.
&RA1 Disable asymmetrical bit rate in V.34 mode.

Command: **&RDn Square Wave Ring Detect**
Values: $n = 0$ or 1
Default: 1 (ZDX)
 0 (ZDXI, ZDXK)
Description: &RD0 Modem detects only sine wave rings.
&RD1 Modem detects both sine and square wave rings.

Command:	&RF<i>n</i>	CTS/RTS Interaction Control
Values:	<i>n</i> = 0 or 1	
Default:	1	
Description:	&RF0 &RF1	Let CTS follow RTS. Let CTS act independently (use with &R).
Command:	&RN	Rate Negotiation
Values:	n/a	
Description:		Forces the modem to perform a rate renegotiation while on line. You must escape to command mode to issue this command.
Command:	&RP	Immediate Line Probe
Values:	n/a	
Description:		Initiates a retrain that makes the processor read line probe information if %DP1 is selected. Valid only when on line in V.34 mode.
Command:	&RR	Immediate Retrain
Values:	n/a	
Description:		Forces the modem to perform an immediate retrain while on line. You must escape to command mode to issue this command.
Command:	\$R<i>n</i>	Retransmit Count
Values:	<i>n</i> = 0 or 1	
Default:	0	
Description:	\$R0 \$R1	Disconnect after 50 retransmits of a data block. Do not disconnect after 50 retransmits.
Command:	\$r=<i>n</i>	Set Register Value
Values:	<i>r</i> = S-register number; <i>n</i> varies	
Default:	None	
Description:		Set value of register <i>Sr</i> to value of <i>n</i> , where <i>n</i> is entered in decimal format.

Command:	Sr?	Read Register Value
Values:	<i>r</i> = S-register number	
Default:	None	
Description:	Read value of register <i>Sr</i> and display value in 3-digit decimal form.	
Command:	&Sn	Data Set Ready Control
Values:	<i>n</i> = 0, 1, or 2	
Default:	1	
Description:	&S0 Force DSR high (on). &S1 Let DSR follow CD. &S2 DSR drops on disconnect, then goes high again. (Used by some CBX phone systems.)	
Command:	&SF<i>n</i>	DSR/CD Interaction Control
Values:	<i>n</i> = 0 or 1	
Default:	0	
Description:	&SF0 Select DSR to follow CD. &SF1 Select DSR to be independent.	
Command:	\$SB<i>n</i>	Serial Port Baud Rate
Values:	<i>n</i> = speed	
Default:	57600	
Description:	\$SB300 Set serial port to 300 bps. \$SB1200 Set serial port to 1200 bps. \$SB2400 Set serial port to 2400 bps. \$SB4800 Set serial port to 4800 bps. \$SB9600 Set serial port to 9600 bps. \$SB19200 Set serial port to 19200 bps. \$SB38400 Set serial port to 38400 bps. \$SB57600 Set serial port to 57600 bps. \$SB115200 Set serial port to 115200 bps.	

Note: Baud adjust must be off (**\$BA0**) to enable fixed baud rate.

Command: **#Sy Enter Setup Password**
Values: y = password (6–10 characters)
Default: MODEMSETUP
Description: Enters the remote configuration setup password.

Command: **#S=y Store Setup Password**
Values: y = password (6–10 characters)
Default: MODEMSETUP
Description: Stores a new remote configuration setup password.

Command: **T Tone-Dial**
Values: n/a
Default: P command
Description: Modem will tone-dial numbers following a **T** in the dialing command.

Command: **&Tn Respond to Remote Digital Loopback Signal**
Values: $n = 4$ or 5
Default: 5
Description: **&T4** Enable response to remote digital loopback signal.
&T5 Disable response to remote digital loopback signal.

Command: **#Tn Trellis-Coded Modulation**
Values: $n = 0$ or 1
Default: 1
Description: **#T0** Disable trellis-coded modulation.
#T1 Enable trellis-coded modulation.

Command:	Un	Loopback Test Modes
Values:	$n = 0, 1, 2, \text{ or } 3$	
Default:	None	
Description:	U0	Enable local nalog loopback originate mode.
	U1	Enable local analog loopback answer mode.
	U2	Enable remote digital loopback mode.
	U3	Enable local digital loopback mode.
Command:	Vn	Result Codes (Verbose/Terse)
Values:	$n = 0 \text{ or } 1$	
Default:	1	
Description:	V0	Result codes sent as digits (terse response).
	V1	Result codes sent as words (verbose response).
Command:	#Vn	V.32terbo Handshake Tones
Values:	$n = 0 \text{ or } 1$	
Default:	1	
Description:	#V0	Include V.32terbo tones in handshake.
	#V1	Exclude V.32terbo tones from handshake.
Command:	W	Wait for New Dial Tone
Values:	n/a	
Description:		Inserted in dialing command, causes modem to wait for a new dial tone. (X2 or X4 must be selected.)
Command:	&Wn	Store Configuration
Values:	$n = 0 \text{ or } 1$	
Default:	1	
Description:	&W0	Store current settings in NVRAM; load them at power-on or following the ATZ command instead of loading the factory defaults from ROM.
	&W1	Clear user default settings from NVRAM.

Command:	<i>Xn</i>	Result Codes and Call Progress
Selection		

Values:	<i>n</i> = 0–4
---------	----------------

Default:	0
----------	---

Description:	X0	Basic result codes (<i>CONNECT</i> only); does not look for dial tone or busy signal.
	X1	Extended result codes (<i>CONNECT 28800</i> , <i>CONNECT 33600</i> , etc.); does not look for dial tone or busy signal.
	X2	Extended result codes with <i>NO DIALTONE</i> ; does not look for busy signal.
	X3	Extended result codes with <i>BUSY</i> ; does not look for dial tone.
	X4	Extended result codes with <i>NO DIALTONE</i> and <i>BUSY</i> .

Command:	<i>#Xn</i>	Number of XOFF Characters Sent
-----------------	-------------------	---------------------------------------

Values:	<i>n</i> = 0 or 1
---------	-------------------

Default:	0
----------	---

Description:	#X0	Single XOFF character sent after buffer is full.
	#X1	Multiple XOFF characters sent (one for every character received after buffer is full).

Command:	<i>Yn</i>	Long Space Disconnect
-----------------	------------------	------------------------------

Values:	<i>n</i> = 0 or 1
---------	-------------------

Default:	0
----------	---

Description:	Y0	Disable sending or responding to long space break signal on disconnect.
	Y1	Enable sending or responding to long space break signal on disconnect. (Both modems must have Y1 set.)

Command:	Z	Modem Reset
Values:	n/a	
Description:		Reset modem to default values. Defaults come from user NVRAM if &W0 is set, from factory ROM if &W1 is set.
Command:	,	Dialing Pause
Values:	n/a	
Description:		Placed in dialing command, comma causes dialing pause for time set by S8.
Command:	:	Continuous Redial
Values:	n/a	
Description:		Placed at end of dial command, a colon causes continuous redial of a number (10 in DOC modems) until answered. Not used in ZDXK or ZDXI modems.
Command:	;	Return to Command Mode
Values:	n/a	
Description:		Placed at end of dial command, a semicolon causes an immediate return to command mode after dialing.
Command:	!	Flash On-Hook
Values:	n/a	
Description:		Placed in dial command, exclamation point causes modem to flash on-hook.
Command:	@	Quiet Answer
Values:	n/a	
Description:		Placed in dial command, @ causes modem to wait for a ringback, then 5 seconds of silence, before processing next part of command.

Command:	\$	Call Card Tone Detect
Values:	n/a	
Description:		Placed in dial command, causes modem to wait for a call card tone before processing next part of command (such as a call card number).

Command:	%%%AT<CR>	Remote Configuration
Values:	n/a	
Description:		Initiates remote configuration mode while online with remote modem. The remote configuration escape character (%) is defined in register S13.

Command:	+++AT<CR>	Escape Code
Values:	n/a	
Description:		Puts modem in command mode (and optionally issues a command) while remaining on line. Enter +++AT , up to ten command characters (or as defined by S34), and a RETURN. Used mostly to issue hang-up command: +++ATH<CR> .

Command:	<BREAK>AT<CR>	Escape Sequence
Values:	n/a	
Description:		Alternate escape method. Puts modem in command mode while remaining on line. Send a <BREAK> signal followed by AT , up to sixty command characters, and a RETURN. You must set the modem to %E2 or %E3 before you can use this escape method.

S-Registers

Certain modem values, or parameters, are stored in memory locations called S-registers. Use the **S** command to read or to alter the contents of S-registers (see previous section).

<u>Register</u>	<u>Unit</u>	<u>Range</u>	<u>Default</u>	<u>Description</u>
S0	1 ring	0, 1–255	1	Sets the number of rings until the modem answers. ATS0=0 disables autoanswer completely.
S1	1 ring	0–255	0	Counts the rings that have occurred.
S2	decimal	0–127	43 (+)	Sets ASCII code for the escape code character.
S3	decimal	0–127	13 (^M)	Sets ASCII code for the RETURN character.
S4	decimal	0–127	10 (^J)	Sets ASCII code for the LINE FEED character.
S5	decimal	0–127	8 (^H)	Sets ASCII code for the BACKSPACE character.
S6	1 sec.	2–255 4–255† 4–7‡	2 4† 4‡	Sets the time the modem will wait for a dial tone before aborting a call.
S7	1 sec.	1–255 1–45* 1–55‡	45 45* 55‡	Sets the time the modem will wait for a carrier signal before aborting a call.
S8	1 sec.	0–255 4–255† 4–7‡	2 4† 4‡	Sets the length of a pause caused by a comma character in a dialing command.
S9	100 ms	1–255	6	Sets delay between when the modem detects a valid carrier signal and when it turns on its CD circuit.

<u>Register</u>	<u>Unit</u>	<u>Range</u>	<u>Default</u>	<u>Description</u>
S10	100 ms	1–254, 255	7	Sets how long a carrier signal must be lost before the modem disconnects. S10=255 causes the modem to not disconnect with loss of carrier.
S11	1 ms	1–255 80–255* 80–255‡	70 80* 80‡	Sets spacing and duration of dialing tones. 50 ms is the recommended minimum.
S13	decimal	0, 1–127	37 (%)	Sets ASCII code for remote configuration escape character. S13=0 disables remote configuration.
S17	10 ms	1–255	25	Sets the length of the break time (space) sent to the local PC when the modem receives a remote break.
S24	50 ms	0–255	20	Sets the time the DSR, CTS, and CD signals drop before going high again. Used for some PBX and CBX phone systems.
S25	100 ms	0, 1–255	0	Sets the time the DTR signal must be dropped before the modem disconnects. The 0 default equals 50 ms.
S30	1 min.	0, 1–255	0	Sets how long the modem waits after the last character is received or transmitted before it disconnects. The 0 default disables the timer.

4 - AT Commands, S-Registers and Result Codes

<u>Register</u>	<u>Unit</u>	<u>Range</u>	<u>Default</u>	<u>Description</u>
S32	100 ms	0-255	20	Sets the time the modem will wait for a RETURN to be entered during escape sequence execution.
S34	1 character	0-60	10	Sets the number of command characters allowed after +++AT .
S36	1 sec.	0, 1-255	5	Sets the time between DTR inactive and modem off-hook. S36=0 disables DTR busy-out.
S37	1 sec.	0-255	5	Sets the time between DTR active and modem on-hook.
S43	decimal	28, 26, 24, 21, 19, 16, 14, 12, 96, or 48	0	Sets fixed V.34 connect speed. 28 = 28800 bps; 26 = 26400 bps; . . . 48 = 4800 bps. 0 default disables this feature.
S48	decimal	33, 31, 28, 26, 24, 21, 19, 16, 14, 12, 96, or 48	0	Sets maximum V.34 connect speed. 33 = 33600 bps; 31 = 31200 bps; . . . 48 = 4800 bps. 0 default disables feature (same as S48=33).

Result Codes

In command mode the MT2834ZDX can send responses, or result codes, to your computer. Result codes are used by communications programs and can also appear on your monitor.

AT&Q0 selects Multi-Tech result codes with *RELIABLE*, *LAPM*, and *COMPRESSED* modifiers (default).

AT&Q1 selects standard AT result codes without modifiers.

&Q0 Multi-Tech Result Codes

<u>Terse</u>	<u>Verbose</u>
0	OK
1	CONNECT
2	RING
3	NO CARRIER
4	ERROR
5	* CONNECT 1200
6	NO DIALTONE
7	BUSY
8	NO ANSWER
9	CONNECT 2400
11	* CONNECT 4800
12	* CONNECT 9600
13	* CONNECT 14400
19	* CONNECT 19200
21	* CONNECT 21600
24	* CONNECT 24000
26	* CONNECT 26400
28	* CONNECT 28800
31	* CONNECT 31200
33	* CONNECT 33600

&Q1 Standard AT Result Codes

<u>Terse</u>	<u>Verbose</u>
0	OK
1	CONNECT
2	RING
3	NO CARRIER
4	ERROR
5	CONNECT 1200
6	NO DIAL TONE
7	BUSY
8	NO ANSWER
10	CONNECT 2400
11	CONNECT 4800
12	CONNECT 9600
13	CONNECT 14400
19	CONNECT 19200
21	CONNECT 21600
24	CONNECT 24000
26	CONNECT 26400
28	CONNECT 28800
31	CONNECT 31200
33	CONNECT 33600

* With error correction on, *RELIABLE* (or *R*) or *LAPM* (or *L*) is added to these result codes. With data compression on, *COMPRESSED* (or *C*) is added.

Chapter 5 - Troubleshooting

Introduction

Your MultiModemZDX was thoroughly tested at the factory before it was shipped. If you are unable to make a successful connection, or if you experience data loss or garbled characters during your connection, it is possible that the modem is defective. However, it is more likely that the source of your problem lies elsewhere. The following symptoms are typical of problems you may encounter:

- None of the LEDs light when the modem is on.
- The modem does not respond to commands.
- The modem dials but is unable to make a connection.
- The modem disconnects while online.
- The modem cannot connect when answering.
- File transfer is slower than it should be.
- You are losing data.
- You are getting garbage characters on the monitor.
- You can't run your fax and communications software at the same time.

If you experience problems, please check the following possibilities before calling Tech Support (see Appendix C).

None of the LEDs Light When the Modem Is On

When you turn on the ZDX, the LED indicators on the front panel should flash briefly as the modem runs a self-test. If the LEDs remain off, the modem is probably not receiving power.

- Make sure the modem's power switch is on, especially if you normally turn on the modem by turning on a power strip.
- If the power supply is plugged into a power strip, make sure the power strip is plugged in and its power switch is on.
- Make sure the power supply module is firmly connected to the modem and to the wall outlet or power strip.
- If the power strip is on and the modem switch is on, try moving the modem power supply to another outlet on the power strip.
- Test that the outlet is live by plugging a lamp into it.
- The modem or power supply may be defective. If you have another Multi-Tech modem, try swapping modems. If the problem goes away, the first modem or power supply may be defective. Call Tech Support for assistance.

CAUTION: Do not under any circumstances replace the power supply module with one designed for another product, as it may damage the modem and void your warranty.

The Modem Does Not Respond to Commands

- Make sure the modem is plugged in and turned on. (See “None of the LEDs Light When the Modem Is On.”)
- Make sure you are issuing the modem commands from the data communications software, either manually in terminal mode or automatically by configuring the software. (You cannot send commands to the modem from the DOS prompt.)
- Make sure you are in terminal mode in your data communications program, then type **AT** and press ENTER. If you get an *OK* response, your connections are good and the problem likely is in your phonebook entry or session settings.
- Try resetting your modem by turning it off and on. Make sure there is a reset command (**&F**) in your initialization string, or your modem may not initialize correctly.
- If you don't get an *OK*, the problem may still be in the communications software. Make sure you have done whatever is necessary in your software to make a port connection. Not all communications programs connect to the COM port automatically. Some connect when the software loads and remain connected until the program terminates. Others can disconnect without exiting the program or allow multiple terminals to be open, but only one can access the modem at a time. If the terminal reports that it cannot make a connection, yet the modem's TR indicator is on, click on the Window menu to see if more than one terminal is open. The modem's TR indicator shows that the software has made a connection with the modem through the COM port.
- Your communications software settings may not match the physical port the modem is connected to. The serial cable may be plugged into the wrong connector—check your computer documentation to make sure. Or you may have selected a COM port in your software other than the one the modem is physically connected to—compare the settings in your software to the physical connection.

- If the modem is on, the cable is plugged into the correct port, the communications software is configured correctly, and you still don't get an *OK*, the fault may be in the serial cable. Make sure it is firmly connected at both ends.
- Is this the first time you have used the cable? If so, it may not be correct. Check the cable description on the packaging to make sure the cable is the right one for your computer.
- Peripheral expansion cards, such as bus mouse and sound cards, may include a serial port preconfigured as COM1 or COM2. The extra serial port, or the card itself, may use the same COM port, memory address, or interrupt request (IRQ) as your communications port. Be sure to disable any unused ports.

To look for address or IRQ conflicts if you use Windows 3.1x, select File, Run in Program Manager, type **MSD**, and press ENTER. Then select Mouse, COM Ports, and IRQ Status and note the addresses and IRQs that are in use. If you find an IRQ conflict, note which IRQs are not being used, then change one of the conflicting devices to use one of the unused IRQs. If you find an address conflict, change the address of one of the conflicting devices.

To change a port address or IRQ in Windows 3.1x, double-click the Control Panel icon, then the Ports icon. Click on the port you want to change, click Settings, click Advanced, and select the new port address and/or interrupt. If you wish to use COM3 or COM4, note that COM3 shares an IRQ with COM1, as does COM4 with COM2, so you should change their IRQs to unused ones, if possible.

If you use Windows 95, right-click on My Computer, select Properties from the menu, click on the Device Manager tab, double-click on Ports, then double-click on the Communications Port your modem is connected to. In the port's Properties sheet, click on the Resources tab to see the port's Input/Output range and Interrupt Request. If another device is using the same address range or IRQ, it will appear in the Conflicting Device List. Uncheck Use Automatic Settings to change the port's settings so they do not conflict with the other device, or select the port the conflicting device is on and change it instead.

If you need to open your computer to change switches or jumpers on the conflicting device; refer to the device's documentation.

- The serial port may be defective. If you have another serial port, install the modem on it, change the COM port setting in your software, and try again.
- The modem may be defective. If you have another Multi-Tech modem, try swapping modems. If the problem goes away, the first modem is possibly defective. Call Tech Support for assistance (see Appendix C).

The Modem Dials But Cannot Make a Connection

There can be several reasons the ZDX fails to make a connection. Possibilities include

- lack of a physical connection to the telephone line.
- a wrong dial tone.
- a busy signal.
- a wrong number.
- no modem at the other end.
- a faulty modem, computer, or software at the other end.
- incompatibility between modems.

You can narrow the list of possibilities by using extended result codes. To enable them, enter **ATV1X4** and press ENTER while in terminal mode, or include **V1X4** in the modem's initialization string. When you dial again, the modem will report the call's progress.

- If the modem reports *NO DIALTONE*, check that the modem's telephone line cable is connected to both the modem's LINE jack (not the PHONE jack) and the telephone wall jack. If the cable looks secure, try replacing it. If that doesn't work, the problem may be in your building's telephone installation. To test the building installation, plug a telephone into your modem's telephone wall jack and listen for a dial tone. If you hear a dial tone, your modem may be installed behind a company phone system (PBX) with an internal dial tone that sounds different from the normal dial tone. In that case, the modem may not recognize the dial tone and may treat it as an error. Make sure your modem's square wave ring detection is turned on (**&RD1**). Check your PBX manual to see if you can change the internal dial tone; if you can't, change your modem's initialization string to replace **X4** with **X3**, which will cause the modem to ignore dial tones (note, however, that **X3** is not allowed in some countries, such as France and Spain).
- If the modem reports *BUSY*, the other number may be busy, in which case you should try again later, or it may indicate that you have failed to add a **9**, prefix to the phone number if you must dial **9** for an outside line.

If you must dial 9 to get an outside line, the easiest way to dial it automatically is to include it in the modem's dial prefix, e.g., **ATDT9,**. Note the comma, which inserts a pause before the number is dialed. By inserting **9**, into the dial prefix, you do not have to include it in each directory entry.

To change the dial prefix in Windows Terminal, select Settings, Modem Commands. To change it in Windows 95 HyperTerminal, select Call, Connect from the menu bar, click Dialing Properties, and type **9** in the local and long distance boxes in How I Dial from This Location.

- If the modem reports *NO ANSWER*, the other system has failed to go off-hook, or you might have dialed a wrong number. Check the number.
- If the modem reports *NO CARRIER*, the phone was answered at the other end, but no connection was made. You might have dialed a wrong number, and a person answered instead of a computer, or you might have dialed the correct number but the other computer or software was turned off or faulty. Check the number and try again, or try calling another system to make sure your modem is working. Also, try calling the number on your telephone. If you hear harsh sounds, then another modem is answering the call, and the modems may be having problems negotiating because of modem incompatibilities or line noise. Try connecting at a lower speed.

The Modem Disconnects While Online

- If you have call waiting on the same phone line as your modem, it may interrupt your connection when someone tries to call you. If you have call waiting, disable it before each call. In most telephone areas, you can disable call waiting by preceding the telephone number with ***70** (check with your local telephone company).

You can automatically disable call waiting by including the disabling code in the modem's dial prefix (e.g., **ATDT*70**,—note the comma, which inserts a pause before the number is dialed). To change the dial prefix in Windows Terminal, select Settings, Modem Commands. To change it in Windows 95 HyperTerminal, select Call, Connect from the menu bar, click Dialing Properties, check This Location has Call Waiting, and select the correct code for your phone service.

- If you have extension phones on the same line as your modem, you or someone else can interrupt the connection by picking up another phone. If this is a frequent problem, disconnect the extension phones before using the modem, or install another phone line especially for the modem.
- Check for loose connections between the modem and the computer, the telephone jack, and AC power.
- You may have had a poor connection because of line conditions or the problem may have originated on the other end of the line. Try again.
- If you were online with a BBS, it may have hung up on you because of lack of activity on your part or because you exceeded your time limit for the day. Try again.

The Modem Cannot Connect When Answering

- Auto-answer may be disabled. Turn on auto-answer in your datacomm program or send the command **ATS0=1** to your modem in terminal mode.

File Transfer Is Slower Than It Should Be

- You may have an older UART. For best throughput, install a 16550AFN UART or a Multi-Tech ISI serial port card. See the “Quick Start” chapter for information on how to identify your UART.
- If you are running under Windows 3.1 and have a 16550AFN UART, you must replace the Windows serial driver, COMM.DRV, to take full advantage of the UART’s speed. (See “The 16550 UART and Windows 3.1” in MultiModemZDX Help.)
- If you are using a slow transfer protocol, such as Xmodem or Kermit, try Zmodem or Ymodem/G instead.
- Is your line noisy? If there is static on your line, the modem has to resend many blocks of data to insure accuracy. You must have a clean line for maximum speed.
- Are you downloading a compressed file with MNP 5 hardware compression enabled? Since hardware data compression cannot compress a file already compressed by an archiving program, the transfer can be marginally slower with data compression enabled than with it disabled. (See “When to Disable Data Compression” in MultiModemZDX Help.)
- Try entering the **L8** (List Online Diagnostics) command in online mode, making a screen print of the diagnostics listing, and checking for parameters that may be unacceptable (number of retrains, round trip delay, etc.).

I Am Losing Data

- If you are using data compression and a high speed serial port, set the serial port baud rate to four times the data rate.
- Your UART may not be reliable at serial port speeds over 9600 bps or 19,200 bps. Turn off data compression, reset your serial port speed to a lower rate, or replace your serial port with a faster one.
- Make sure the flow control method you selected in software matches the method selected in the modem. If you have a Macintosh, you may have the wrong cable for hardware flow control.
- If you are running under Windows 3.1 and have a 16550AFN UART, you may need to turn on the 16550's data buffers and/or replace the Windows serial driver, COMM.DRV. (See "The 16550 UART and Windows 3.1" in the MultiModemZDX Help file.)
- Try entering the **L8** (List Online Diagnostics) command in online mode, making a screen print of the diagnostics listing, and checking for parameters that may be unacceptable (number of retrains, round trip delay, etc.).

I Am Getting Garbage Characters on the Monitor

- Your computer and the remote computer may be set to different word lengths, stop bits, or parities. If you have connected at 8-N-1, try changing to 7-E-1, or vice-versa, using your communications software.
- You may be experiencing line noise. Enable error correction, if it is disabled, or hang up and call again; you may get a better connection.
- At speeds above 2400 bps, the remote modem might not use the same transmission or error correction standards as your modem. Try connecting at a slower speed or disabling error correction. (With no error correction, however, line noise can cause garbage characters.)
- Try entering the **L8** (List Online Diagnostics) command in online mode, making a screen print of the diagnostics listing, and checking for parameters that may be unacceptable (number of retrains, round trip delay, etc.).

My Fax and Communications Software Won't Run at the Same Time

Communications devices can be accessed by only one application at a time. Under DOS or Windows 3.1x, you can run either your fax software or your datacomm software, but not both at the same time. In Windows 95, you can have data and fax communication applications open at the same time, but they cannot use the same modem at the same time.

Appendix A - Regulatory Information

Single-User Software License Agreement

IMPORTANT — READ BEFORE OPENING DISKETTE PACKAGE

This copy of Multi-Tech™ software is provided only on the condition that you, Customer, agree to the following license. READ THIS LICENSE CAREFULLY. If you do not agree to the terms contained in this license, return the packaged program UNOPENED to the place you obtained it. If you agree to the terms contained in this license, fill out the enclosed Software Registration Card, date, sign and return the card by mail. Opening the packaged program constitutes agreement to be bound by the terms and conditions of this Software License Agreement. Your right to use the software terminates automatically if you violate any part of this software license agreement.

MULTI-TECH SOFTWARE LICENSE AGREEMENT

Multi-Tech Systems, Inc. (MTS) agrees to grant and Customer agrees to accept on the following terms and conditions, a non-transferable and non-exclusive license to use the software program(s) delivered with this Agreement.

1. GRANT OF LICENSE. MTS grants Customer the right to use one copy of the software on a single computer (the Licensed System). You may not network the software or otherwise use it on more than one computer or computer terminal at the same time.

2. COPYRIGHT. The software is owned by MTS and is protected by United States copyright laws and international treaty provisions. Therefore, Customer must treat the software like any copyrighted material. Customer may install the software to a single hard disk and keep the original for backup or archival purposes. Customer shall NOT copy, or translate into any language, in whole or in part, any documentation which is provided by MTS in printed form under this Agreement.

3. OTHER RESTRICTIONS. The software may not be assigned, sublicensed, translated or otherwise transferred by Customer without prior written consent from MTS. Customer may not reverse engineer, decompile, or disassemble the software. Any updates shall be used only on the Licensed System, and shall remain subject to all other terms of this Agreement. Customer agrees not to provide or otherwise make available the software including, but not limited to documentation, programs listings, object code, or source code, in any form, to any person other than Customer and his employees and /or agents, without prior written consent from MTS. Customer acknowledges that the techniques, algorithms, and processes contained in the software are proprietary to MTS and Customer agrees not to use or disclose such information except as necessary to use the software.

Customer shall take reasonable steps consistent with steps taken to protect its own proprietary information to prevent the unauthorized copying or use by third parties of the software or any of the other materials provided under this Agreement. Any previous version of the software should be destroyed or returned to Multi-Tech Systems, Inc. within 90 days of receipt of the software upgrade or update.

4. WARRANTY. MTS warrants that the software will perform substantially in accordance to the product specifications in effect at the time of receipt by Customer. If it fails to perform accordingly, MTS will optionally repair any defect, or replace it. This warranty is void if the failure has resulted from accident, abuse, or misapplication. A signed Software Registration Card must be on file at MTS for this warranty to be in effect.

THE FOREGOING WARRANTY IS IN LIEU ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, AND ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED. IN NO EVENT WILL MTS BE LIABLE FOR CONSEQUENTIAL DAMAGES RESULTING FROM USE OF THE LICENSED PROGRAM, WHETHER AS A RESULT OF MTS NEGLIGENCE OR NOT, EVEN IF MTS HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

5. INDEMNIFICATION. MTS will indemnify and defend Customer from any claim that the software infringes on any copyright, trademark, or patent. Customer will indemnify and defend MTS against all other proceedings arising out of Customers use of the software.

6. GENERAL. If any of the provisions, or portions thereof, of this Agreement are invalid under any applicable statute or rule of law, they are to that extent deemed to be omitted.

This is the complete and exclusive statement of the Agreement between the parties, which supersedes all proposals, oral, written and all other communications between the parties relating to the subject matter of this Agreement. This Agreement may only be amended or modified in writing, signed by authorized representatives of both parties.

This Agreement shall be governed by the laws of the State of Minnesota.

The waiver of one breach or default hereunder shall not constitute the waiver of any subsequent breach or default.

FCC Regulations for Telephone Line Interconnection

1. This equipment complies with Part 68 of the Federal Communications Commission (FCC) rules. On the outside surface of this equipment is a label that contains, among other information, the FCC registration number and ringer equivalence number (REN). If requested, this information must be provided to the telephone company.
2. As indicated below, the suitable jack (Universal Service Order Code connecting arrangement) for this equipment is shown. If applicable, the facility interface codes (FIC) and service order codes (SOC) are shown.
3. The ringer equivalence number (REN) is used to determine the quantity of devices which may be connected to the telephone line. Excessive REN's on the telephone line may result in the devices not ringing in response to an incoming call. In most, but not all areas, the sum of the REN's should not exceed five (5.0). To be certain of the number of devices that may be connected to the line, as determined by the total REN's, contact the telephone company to determine the maximum REN for the calling area.
4. If this equipment causes harm to the telephone network, the telephone company will notify you in advance. But if advance notice isn't practical, the telephone company will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it is necessary.
5. The telephone company may make changes in its facilities, equipment, operations, or procedures that could affect the operation of the equipment. If this happens, the telephone company will provide advance notice in order for you to make necessary modifications in order to maintain uninterrupted service.

6. If trouble is experienced with this equipment (the model of which is indicated below) please contact Multi-Tech Systems, Inc. at the address shown below for details of how to have repairs made. If the trouble is causing harm to the telephone network, the telephone company may request you remove the equipment from the network until the problem is resolved.
7. No repairs are to be made by you. Repairs are to be made only by Multi-Tech Systems or its licensees. Unauthorized repairs void registration and warranty.
8. This equipment cannot be used on public coin service provided by the telephone company. Connection to Party Line Service is subject to state tariffs. (Contact the state public utility commission, public service commission or corporation commission for information.)
9. If so required, this equipment is hearing-aid compatible.

Manufacturer:	Multi-Tech Systems, Inc.
Model Number:	MT2834ZDX, MT2834ZDXb
FCC Registration Number:	AU7USA-20673-MM-E
Ringer Equivalence:	0.3B
Modular Jack (USOC):	RJ11C or RJ11W (single line)
Service Center in U.S.A.	Multi-Tech Systems Inc. 2205 Woodale Drive Mounds View, MN 55112 (800) 328-9717 (612) 785-3500 (612) 785-9874 FAX (800) 392-2432 BBS (612) 785-3702 INTL. BBS

NOTE: This equipment has been tested and found to comply with the limits for a **Class B** digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Plug the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FAX WARNING: The Telephone Consumer Protection Act of 1991 makes it unlawful for any person to use a computer or other electronic device to send any message via a telephone fax machine unless such message clearly contains in a margin at the top or bottom of each page or the first page of the transmission, the date and time it is sent and an identification of the business or other entity, or other individual sending the message and the telephone number of the sending machine or such business, other entity, or individual.

See your fax software manual for setup details.

Canadian Limitations Notice

Notice: The Industry Canada label identifies certificated equipment. This certification means that the equipment meets certain telecommunications network protective, operational and safety requirements. The Industry Canada label does not guarantee the equipment will operate to the user's satisfaction.

Before installing this equipment, users should ensure that it is permissible to be connected to the facilities of the local telecommunications company. The equipment must also be installed using an acceptable method of connection. In some cases, the company's inside wiring associated with a single line individual service may be extended by means of a certified connector assembly (telephone extension cord). The customer should be aware that compliance with the above conditions may not prevent degradation of service in some situations.

Repairs to certified equipment should be made by an authorized Canadian maintenance facility designated by the **supplier**. Any repairs or alterations made by the user to this equipment; or equipment malfunctions, may give the telecommunications company cause to request the user to disconnect the equipment.

Users should ensure for their own protection that the electrical ground connections of the power utility, telephone lines and internal metallic water pipe system, if present, are connected together. This precaution may be particularly important in rural areas.

Caution: Users should not attempt to make such connections themselves, but should contact the appropriate electric inspection authority, or electrician, as appropriate.

The Load Number (**LM**) assigned to each terminal device denotes the percentage of the total load to be connected to a telephone loop which is used by the device, to prevent overloading. The termination on a loop may consist of any combination of devices subject only to the requirement

that the total of the Load Numbers of all the devices does not exceed 100. The Load Number for this product is **3**.

This digital apparatus does not exceed the Class B limits for radio noise for digital apparatus set out in ICES-003 of Industry Canada.

Compliance with BABT Requirements

Approved for connection to telecommunications system specified in the instructions for use subject to the conditions set out in them.

European Low Voltage Directive

When correctly installed and maintained, the modem will present no hazard to the user. When correctly installed the modem will be connected to the PSTN and to a Data Terminal Equipment (DTE), whose modem connections comply with CCITT recommendation V28. The DTE connections are therefore taken to be safe voltages (less than ± 30 volts).

Compliance with BS6305 Clause 6.2, BS6320 Clause 7.2, and BABT/SITS/82/005S/D

- a. The modem is suitable for connection to the Public Switched Telephone Network (PSTN) provided by British Telecommunications plc or Kingston Communications (Hull) plc. Circuit supply by British Communications, Mercury Communication, or Hull City Council. Only direct exchange lines may be used, not shared service.
- b. The modem is suitable for household, office, and similar general indoor use. It is not suitable for use as an extension to a payphone.
- c. BT lines supplied must support either loop disconnect or multifrequency tone signalling.
- d. REN (Ringer Equivalence Number).

The REN value of a unit is calculated from $3/n$ where n is the total number of units which can be connected in parallel which will still cause the standard bell (as defined in BS6305 Appendix D) to ring. REN values of less than 0.3 cannot be assigned.

For apparatus which is not capable of forming part of a multiple installation, a REN value of 3 is assigned.

$$\text{REN} = 1$$

If a telephone or other device is connected in parallel with the modem, the combined REN must not exceed 4. A BT supplied telephone may be assumed to have REN of 1.0 unless otherwise noted.

The approval of this modem for connection to the British Telecom public switched telephone network is INVALIDATED if the apparatus is subject to any modification in any material way not authorized by BABT or if it is used with or connected to:

- i. internal software that has not been formally accepted BABT.
- ii. external control software or external control apparatus which cause the operation of the modem associated call set-up equipment to contravene the requirements of the standard set out in BABT/SITS/82/005S/D.

All apparatus connected to this modem and thereby connected directly or indirectly to the British Telecom public switched telephone network must be approved apparatus as defined in Section 22 of the British Telecommunications Act 1984.

Compliance with BS6789: Section 3.1 and Part 2

- a. The modem is not capable of allowing Auto Call using '999' or other PABX emergency numbers.
- b. Modes other than modes 1, 2, or 3 should not be used on the BT PSTN. This modem is a mode 1 device.
- c. Users are advised to check the numbers entered during the Auto Call set up phase prior to dialing.
- d. The user should not issue any sequence of commands to the modem

which would cause the modem to exceed the maximum allowable pause of 8 seconds from the time the modem goes off hook until dialing begins.

- e. For correct operation of the call progress monitor, the power has to be properly connected and switched on.

Compliance with DTI 83/009

- a. The apparatus is only approved for compatible PBXs. Consult the supplier for an up-to-date list of compatible PBXs.
- b. There is no guarantee of correct working in all circumstances. Any difficulties should be referred to Multi-Tech Systems.
- c. If sockets are required for connection to the PBX, use the BT post card only if BT owns the wiring to the PBX.

This apparatus has been approved for the use of the following facilities:

- Auto-calling
- Loop disconnect and MF dialing
- Phone number storage and retrieval by a predetermined code
- Operation in the absence of proceed indication
- Detection of initial and secondary proceed indication
- Automatic storage of last number dialed
- Tone detection-busy
- Auto clear from the originating end
- DTR dialing
- Modem
- PBX timed break register recall

Any other usage will invalidate the approval of the apparatus if, as a result, it then ceases to comply with the standards against which approval was granted.

Modem CE Mark EMC and Safety Compliance

The CE mark is affixed to the enclosed MultiTech product to confirm compliance with the following European Community Directives:

Council Directive 89/336/EEC of 3 May 1989 on the approximation of the laws of Member States relating to electromagnetic compatibility;

and

Council Directive 73/23/EEC of 19 February 1973 on the harmonization of the laws of Member States relating to electrical equipment designed for use within certain voltage limits;

both amended by

Council Directive 93/68/EEC of 22 July 1993 on the harmonization of CE marking requirements.

Appendix B - Technical Specifications

Technical Specifications

Your MT2834ZDX fax modem meets the following specifications:

Model Numbers	MT2834ZDX, MT2834ZDXb, MT2834ZDXI, MT2834ZDXK, MT2834ZDXK-Mac, MT2834ZDX-Mac
Data Rates (Modem)	33.6K and 31.2K (ZDXb only), 28.8, 26.4K, 24K, 19.2K, 16.8K, 14.4K, 12K, 9600, 7200, 4800, 2400, 1200 and 0-300 bps
Data Rates (Fax)	14,400, 9600, 4800 and 2400 bps
Data Format (Modem)	Serial, Binary, Asynchronous
Compatibility (Modem)	ITU-T V.34, AT&T V.32terbo, ITU-T V.32bis, V.32, Bell 212A and 103/113, ITU-T V.22, V.22bis, V.29, V.42, V.42bis; V.21& V.23 in international ZDXI versions
Compatibility (Fax)	ITU-T Group 3, T.4, T.30, V.21, V.27ter, V.29, V.17, and EIA TR29.2
Error Correction	ITU-T V.42 (LAP-M or MNP 2, 3 or 4)
Data Compression	ITU-T V.42bis (4:1 throughput) or MNP 5 (2:1 throughput)
Speed Conversion	Serial port data rates adjustable to 300, 1200, 2400, 4800, 9600, 19.2K, 38.4K, 57.6K and 115.2K bps

Mode of Operation	Half or full duplex over dial-up lines; automatic or manual dialing, automatic or manual answer
Flow Control	XON/XOFF, hardware (RTS/CTS), HP (ENQ/ACK)
Intelligent Features	Fully AT command compatible, autodial, redial, repeat dial, pulse or tone dial, dial pauses, call status display, auto parity and data rate selections, keyboard-controlled modem options, on-screen displays for modem option parameters, command lines of up to 60 digits each, and help menus
Command Buffer	60 characters
Modem Modulations	FSK at 300 bps, PSK at 1200 bps, QAM at 2400, 4800, and 9600 bps (non-trellis), QAM with trellis coded modulation (TCM) at 9600, 12K, 14.4K, 16.8K, 19.2K, 21.6K, 24K, 26.4K, 28.8K, 31.2K and 33.6K bps
Fax Modulations	V.21 CH2 FSK at 300 bps, V.27ter DPSK at 2400 and 4800 bps, V.29 QAM at 7200 and 9600 bps, V.17TCM at 7200, 9600, 12K, and 14.4K bps
Carrier Frequencies ITU-T V.34	1600, 1646, 1680, 1800, 1829, 1867, 1920, 1959, 2000 Hz
Carrier Frequencies AT&T V.32 turbo/ ITU-T V.32bis/V.32	1800 Hz

Carrier Frequencies V.22bis/V.22 or Bell 212A Standard (2400 & 1200 bps)	Transmit originate: 1200 Hz Transmit answer: 2400 Hz Receive originate: 2400 Hz Receive answer: 1200 Hz
Carrier Frequencies Bell 103/113 (300 bps)	Transmit originate: 1270 Hz mark 1070 Hz space Receive originate: 2225 Hz mark 2025 Hz space Transmit answer: 2225 Hz mark 2025 Hz space Receive answer: 1270 Hz mark 1070 Hz space
Fax Carrier Frequencies	V.21 Ch2 (half duplex): 1650 Hz mark, 1850 Hz space for transmit originate 1650 Hz mark, 1850 Hz space for transmit answer V.27ter: 1800 Hz originate/answer V.29 QAM: 1700 Hz originate/answer V.17 TCM 1800 Hz originate/answer
Transmit Level	-13 dBm
Frequency Stability	+/-0.01%
Receiver Sensitivity	-43dBm under worst case conditions
AGC Dynamic Range	43 dB
Interface Connectors	EIA RS-232C/ITU-T V.24/V.28 DB25 RS-232C connector; two RJ-11 phone jacks (one RJ-11 jack on UK and international modems), power jack

Cables	One 14-foot RJ-11 phone cable (USA); country-specific cord for UK and International models; external power transformer and cord
Note: Any cables connected to the computer should be shielded to reduce interference.	
Diagnostics	Power-on self test, local analog loop, local digital loop, remote digital loop
Indicators	LEDs for Transmit Data, Receive Data, Carrier Detect, 28.8K bps, 14.4K bps, 9600 bps, Off Hook, Terminal Ready, Error Correction, Fax
Speaker	Command-controlled speaker for call progress monitoring
Manual Control	Power switch
Environmental	Temperature range 0°-50°C (32°-120°F); humidity range 20-90% (non-condensing)
Power Requirements	100-130V AC, 50/60 Hz, 0.1A/5W; two-prong outlet-mounted transformer (included); 230V/50 Hz optional (international)
Dimensions	10.8 cm wide x 14.8 cm long x 2.9 cm high (4.25" x 5.8" x 1.15")

Appendix C - Service, Warranty and Tech Support

Limited Warranty

Multi-Tech Systems, Inc. (MTS) warrants that this product will be free from defects in material or workmanship for a period of ten years from the date of purchase or, if date of purchase is not provided, ten years from the date of shipment (limited to customers in the U.S., Canada, Mexico, and United Kingdom). For customers in all other countries, due to certain legal restrictions, MTS warrants that this product will be free from defects in material or workmanship for a period of five years from the date of purchase or, if date of purchase is not provided, five years from the date of shipment, unless otherwise limited or prohibited by law.

MTS MAKES NO OTHER WARRANTY, EXPRESSED OR IMPLIED, AND ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED.

This warranty does not apply to any products that have been damaged by lightning storms, water, or power surges, or that have been neglected, altered, abused, used for a purpose other than the one for which they were manufactured, repaired by the customer or any party without MTS's written authorization, or used in any manner inconsistent with MTS's instructions.

MTS's entire obligation under this warranty shall be limited (at MTS's option) to repair or replacement of any products that prove to be defective within the warranty period, or, at MTS's option, issuance of a refund of the purchase price. Defective products must be returned by Customer to MTS's factory with transportation prepaid.

MTS WILL NOT BE LIABLE FOR CONSEQUENTIAL DAMAGES AND UNDER NO CIRCUMSTANCES WILL ITS LIABILITY EXCEED THE PURCHASE PRICE FOR DEFECTIVE PRODUCTS.

On-line Warranty Registration

To register your Multi-Tech product on-line, click on the following link:

<http://www.multitech.com/support/register.htm>

Service

If you are outside the USA, your local distributor of Multi-Tech products usually offers the quickest and most economical repair option. If necessary, you may send your modem to our Mounds View factory in the USA. A modem that is shipped to us from outside the USA must have a Returned Materials Authorization (RMA) and shipping instructions. To return a modem for repair from inside the USA, no RMA is required; simply send it to us freight prepaid. Include a description of the problem, a return shipping address, and a check or purchase order for out-of-warranty repairs.

Please send modems that require repairs to the following address:

Multi-Tech Systems, Inc.
2205 Woodale Drive
Mounds View, MN 55112

Attn: Repair

If you are shipping from outside the USA, please contact our Repair Department for an RMA prior to your shipment. You can contact us by telephone at +(612) 785-3500 or by fax at +(612) 785-9874.

Tech Support

Multi-Tech Systems has an excellent staff of technical support personnel available to help you get the most out of your Multi-Tech product. If you have any questions about the operation of this unit, please call (800) 972-2439 (USA and Canada) or (612) 785-3500 (international and local). Please have modem information available.

The Multi-Tech BBS

Multi-Tech maintains a bulletin board system (BBS) for its customers. Information available from the BBS includes new product information, product upgrade data, and problem-solving tips. There is also a message service that lets you request additional information. The phone number for the Multi-Tech BBS is (800) 392-2432 (USA and Canada) or (612) 785-3702 (international and local).

The BBS can be accessed by any asynchronous modem operating at 1200 bps to 28,800 bps at a setting of 8 bits, no parity, and 1 stop bit (8-N-1).

Logging on to the Multi-Tech BBS

To log on to the Multi-Tech BBS, perform the following steps:

1. Set your communications program to **8-N-1**.
2. Dial our BBS at (800) 392-2432 (USA and Canada) or (612) 785-3702 (international and local).
3. At the prompts, type your first name, last name, and password; then press RETURN. If you are a first time caller, the BBS will ask if your name is spelled correctly. If you answer yes, a questionnaire will appear. You must complete the questionnaire to use the BBS on your first call.

4. Press RETURN until the Main Menu appears. From the Main Menu you have access to three main areas: the Files Menu, the Message Menu, and Bulletins. For help on menu commands, type ?.

Downloading a File

If you know the file name

1. From the Main Menu, type **F** to access the Files Menu, then type **D**.
2. Enter the name of the file you wish to download from the BBS.
3. If a password is required, enter the password.
4. Answer **Y** or **N** to the automatic logoff question.
5. Select a file transfer protocol by typing the indicated letter, such as **Z** for Zmodem (the recommended protocol).
6. If you select Zmodem, the transfer will begin automatically. If you select another protocol, you may have to initiate the transfer yourself. (In most datacomm programs, the PAGE DOWN key initiates the download.)

If you don't know the file name

1. From the Main Menu, type **F** to access the Files Menu. For a list of file areas, type **L** twice. (If you do not type the second **L**, you will list all of the files on the BBS.)
2. Mark the file areas you would like to examine by typing each file area's list number and a RETURN.
3. Enter **L** to list all the files in the selected file areas. Enter **C** to go forward in the file list and **P** to go back.
4. Mark one or more files for download by entering **M**, the list numbers of the files, and a RETURN.
5. Enter **D**. You will see a list of the files you have marked. Enter **E** if you would like to edit the list; otherwise enter **D** again to start the download process.
6. Select a file transfer protocol by typing the indicated letter, such as **Z** for Zmodem (the recommended protocol).

7. If you select Zmodem, the file will transfer automatically. If you select another protocol, you may have to initiate the transfer yourself. (In MEWTERM and many other communications programs, the PAGE DOWN key initiates the download.)
8. When the download is complete, enter **S** to return to the File Menu.

Reading a Message

When you log on, the BBS will tell you if you have a personal message (mail). At the prompt *Would you like to read it now?*, type **R** to read the message. This is the only point at which you can read your mail, since you cannot read any messages from the Message Menu.

Leaving a Message

The Multi-Tech BBS has no public discussion areas. To leave a personal message, select the Message Menu by typing **M** at the Main Menu. Type **E**, then press RETURN to select the Sysop conference. Enter the name of the recipient (or "Sysop"), the subject, and the message text. Press ESCAPE to finish, then type **S** to save the message and exit. To abort the message at any point, leave any of the fields blank and press RETURN.

Bulletins

When you log on, the BBS will ask if you would like to view the bulletin menu. The bulletins are menu-driven; to read a bulletin, enter its number. You can also access the bulletins by typing **B** at the Main Menu.

About CompuServe

In addition to the BBS, Multi-Tech provides support through CompuServe's Modem Vendor Forum (GO MODEMVEN) under GO MULTITECH. Refer to your CompuServe documentation for special operating procedures.

About the Internet

Multi-Tech is a commercial provider on the Internet, and we retrieve e-mail messages from the following mailboxes on a periodic basis:

mtsmktg@multitech.com
mtssales@multitech.com
international@multitech.com
writers@multitech.com

Marketing Dept.
Sales Dept.
International Marketing & Sales
Publications Dept.

If you prefer to receive service via the internet, you can **contact Tech Support via e-mail**.

Multi-Tech's presence includes a Web site at:

<http://www.multitech.com>

and an ftp site at:

<ftp://ftp.multitech.com>

The ftp server mirrors the Multi-Tech BBS.

About the Multi-Tech Fax-Back Service

Multi-Tech's fax-back system provides 24-hour access to sales, marketing, and technical literature for customers in the U.S.A. Dial (612) 717-5888, follow the voice prompts, and enter the document number for either the Sales and Marketing catalog or the Technical Support catalog of documents. For convenience, write your fax number in the following space:

_____.

From the Sales and Marketing catalog, you can request to have newsletters, white papers, press releases, brochures, and other marketing literature faxed to you. From the the Technical Support catalog, you can request basic modem operation information and troubleshooting guides. With either catalog, simply enter the FB Doc. number of the literature you wish to receive.

Multi-Tech Systems, Inc. Reader Response Form

In addition to this *Quick Reference Guide*, which you received with your modem, a complete *Owner's Manual* is available for the MultiModemZDX series of modems. The *Owner's Manual* provides more detailed information on the operation of your modem, including full descriptions of all AT commands. There are also sections on configuring, testing, and troubleshooting your modem. The *Owner's Manual* is also available on disk as a Windows Help file. With the Windows Help version on your computer, help is never more than a few clicks away.

To receive the *Owner's Manual* and/or disk, fill out a copy of this form and mail it with a check or money order for twenty U.S. dollars (\$20) to *Multi-Tech Systems Inc., 2205 Woodale Drive, Mounds View, MN 55112, Attn: Publications*.

Name _____

Organization _____

Address _____

City_____ State_____ Code_____ Country_____

☐ Check here if you would like to receive the *Owner's Manual*.

☐ Check here if you would like to receive the Help disk.

☐ Check here if you would like to receive both.

You can save time and money by using your ZDX modem to download the *Owner's Manual* from our CompuServe forum or from our BBS at (612) 785-3702 or (800) 392-2432. The ASCII version file name is *ZDX_MAN.TXT*. The Windows Help version file name is *ZDXHELP.HLP*.

If you have any questions, please call Multi-Tech's Tech Support at (800) 972-2439 (North America) or (612) 717-5863 (international).

Appendix D - MT2834ZDXb Data Rates

MT2834ZDXb Data Rates

Data Rate (bps)	33 LED	14 LED	96 LED
< 9.6K	●	●	●
9.6K	●	●	○
12.0K	●	○	○
14.4K	●	○	●
16.8K (V.32terbo)	●	⦿	●
19.2K (V.32terbo)	●	☀	●
16.8K (V.34)	○	⦿	●
19.2K (V.34)	○	☀	●
21.6K	○	○	●
24.0K	⦿	○	●
26.4K	☀	○	●
28.8K	○	●	●
31.2K	⦿	●	●
33.6K	☀	●	●
● Off	⦿ Slow blink (1/sec.)		
○ On	☀ Fast blink (5/sec.)		

Index

C

Call waiting	64
COMM.DRV	65, 66
CompuServe	88

D

Datacomm software	59
-------------------------	----

F

Fax-back service	89
Flow control	66
Front panel	58

I

Initialization strings	59, 62
------------------------------	--------

L

L8	65, 66
----------	--------

M

MNP 5	65
-------------	----

P

Power supply	58
Protocols	65

R

Result codes	62
--------------------	----

S

Serial cable	59, 60
Serial port	60, 61, 66
Software User License Agreement	84

T

Technical support	88
Telephone line	62
Terminal mode	59
Testing	58, 62
self-test	58

U

UARTs	66
16550	65, 66

W

Windows 3.1	65, 66
serial port driver	65, 66

X

Xmodem	65
--------------	----

Y

Ymodem/G	65
----------------	----

Z

Zmodem	65
--------------	----